

Radio Shack®

Cal. No. 44-233A



HIGH POWER VIDEO/AUDIO TAPE ERASER

Your Video Cassette Tape Eraser has been specially designed to erase both VHS and Beta video cassettes as well as computer diskettes, all of which require a stronger magnetic field than do normal audio tapes.

Benefits include:

- Reduces background tape noise to virgin tape levels
- Eliminates computer program-blowing glitches on magnetic disks
- Improves video recording quality by eliminating all previously recorded signals
- Erases metal audio tape

Special features are:

- Positive-action trigger on/off switch
- Power-on light to indicate normal operation
- Thermal protection which automatically protects against overheating



The lightning is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation symbol is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the product.

WARNING: To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

INTERMITTENT DUTY: This eraser designed for intermittent use only - 1 minute on and 30 minutes off. **Do not violate this procedure.** It is normal for the unit to become warm while in use. So, after one minute of squeezing the trigger (the red light is on), let the eraser cool for at least 30 minutes. This will prevent overheating and help assure longest unit life.

If the eraser does overheat for any reason, it will turn itself off and the red light will go off. Let the eraser cool for at least 30 minutes. It should then be ready to use again.

CAUTION: Do not use this Video Cassette Tape Eraser near delicate instruments, electronic watches, cardiac pace makers, or prerecorded tapes, films or disks.

HOW TO USE

1. Plug into a standard 110-120V AC power outlet.
2. Select tape to be erased and make sure that all tape is rewound onto one reel.
3. Hold the eraser in your hand and squeeze the trigger. The red light indicates that the unit is operating.
4. While squeezing the trigger, place the bottom of the eraser in contact with the item to be erased. Move the eraser slowly in a circular motion over the entire product area but **do not release the trigger yet.**

Make circular passes around the tape for approximately 10-20 seconds, then slowly withdraw the eraser until it is about three feet away from the tape.

Now release the trigger.

5. Turn the cassette or diskette over and repeat steps 3 and 4.

NOTES: Different magnetic tapes may require different erasure times. A typical tape will require 10-20 seconds, but some tapes may require a longer time.

- Metal tapes require a minimum of 20 seconds per side.
- Do not use the eraser for longer than one minute at any one time. After one minute of use, let the eraser cool for at least 30 minutes.

RADIO SHACK LIMITED WARRANTY

This product is warranted against defects for 90 days from date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply bring your Radio Shack sales slip as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell

**RADIO SHACK
A DIVISION OF TANDY CORPORATION
FORT WORTH, TEXAS 76102**

802-0316

7/94

PRINTED IN U.S.A

LISTED



8J12

Radio Shack

Cat. No. 44-233A

HIGH POWER VIDEO / AUDIO TAPE ERASER

INTERMITTENT DUTY: 1 MIN ON 30 MIN OFF

120V 60 Hz AC 8.5A

Custom Mfd. in U.S.A. for Radio Shack, A Div. of Tandy Corp.